

How Do I Change the Mode?

Legend Series

2003 - 2008

Mode Explanation

Standard mode will maintain the desired temperature. Note that the last measured spa temperature displayed is current only when the pump has been running for at least two minutes. The “STANDARD” icon will display until the mode has changed.

Economy Mode heats the spa to the set temperature only during filter cycles. The “ECONOMY” icon will display until the mode is changed.

Pressing “Jets 1” while in Economy mode puts the spa in **Standard-In-Economy** (“SE”) mode, which operates the same as Standard mode, then reverts to Economy mode automatically after 1 hour. During this time, a press of the “Mode/Program” button will revert to Economy mode immediately.

Sleep mode heats the spa to within 20°F (11°C) of the set temperature only during filter cycles. The “SLEEP” icon will display until the mode is changed.

Standby mode: Pressing “Warm” or “Cool” then “Jets 2” will turn off all spa functions temporarily. This is helpful when changing a filter. Press any button to exit Standby mode.

Directions

- The Mode/Program button is used to switch between Standard, Economy and Sleep modes.
- Press “Mode/Program” to enter mode programming.
- Press “Cool” to cycle through the to the desired mode (LCD flashes until confirmed)
- When desired mode is located, press “Mode/Program” to confirm selection.

How Do I Change the Mode?

Legend Series - LSI557 Model

2005

Mode Explanation

Standard mode will maintain the desired temperature. Note that the last measured spa temperature displayed is current only when the pump has been running for at least two minutes. “Std” will appear on the display momentarily when you switch into Standard mode.

Economy Mode heats the spa to the set temperature only during filter cycles. “Ecn” will appear solid when the temperature is not current and will alternate with the temperature when the temperature is current.

Pressing “Jets 1” while in Economy mode puts the spa in **Standard-In-Economy** (“SE”) mode, which operates the same as Standard mode, then reverts to Economy mode automatically after 1 hour. During this time, pressing “Temp” followed by “Light” will revert the mode to Economy immediately.

Sleep mode heats the spa to within 20°F (11°C) of the set temperature only during filter cycles. “SLP” will appear on the display until the mode is changed.

Standby mode: Pressing “Temp” followed by “Blower” or “Jets 2” or “Aux” will turn off all spa functions temporarily. This is helpful when changing a filter. Pressing any button exits Standby mode.

Directions

- A button combination is used to switch between Standard, Economy and Sleep mode.
 - Press “Temp” followed by “Light” to enter mode programming.
 - Press “Temp” to cycle through to desired mode (LCD flashes until confirmed).
 - Press “Light” to confirm selection.
-

How Do I Change the Mode?

Legend Series – LSI557 & LSX557 Model

2006 - 2007


Mode Explanation

Standard mode is programmed to maintain the desired temperature. Note that the last measured spa temperature displayed is current only when the pump has been running for at least two minutes. “St” will be displayed momentarily when you switch into Standard mode.

Economy Mode heats the spa to the set temperature only during filter cycles. “Ec” will display solid when the temperature is not current and will alternate with the temperature when the temperature is current.

Sleep mode heats the spa to within 20°F (11°C) of the set temperature only during filter cycles. “SL” will display solid when the temperature is not current, and will alternate with the temperature when the temperature is current.

Directions

 Mode is changed by pressing “Warm” or “Cool” button, then pressing the “Light” button.

Legend Series – LSX557

2008

Mode Explanation

Standard mode is programmed to maintain the desired temperature. Note that the last measured spa temperature displayed is current only when the pump has been running for at least two minutes. “Std” will be displayed momentarily when you switch into Standard mode.

Economy Mode heats the spa to the set temperature only during filter cycles. “Ecn” will display solid when the temperature is not current and will alternate with the temperature when the temperature is current.

Sleep mode heats the spa to within 20°F (11°C) of the set temperature only during filter cycles. “SLP” will display solid when the temperature is not current, and will alternate with the temperature when the temperature is current.

Directions

- ☒ Mode is changed by pressing “Warm” or “Cool” button, then pressing the “Mode” button.

How Do I Change the Mode?

Down East Series (2 – 3 Pump Systems)

2003 - 2005

Mode Explanation

Standard mode will maintain the desired temperature. Note that the last measured spa temperature displayed is current only when the pump has been running for at least two minutes. “Std” will appear on the display momentarily when you switch into Standard mode.

Economy Mode heats the spa to the set temperature only during filter cycles. “Ecn” will appear solid when the temperature is not current and will alternate with the temperature when the temperature is current.

Pressing “Jets 1” while in Economy mode puts the spa in **Standard-In-Economy** (“SE”) mode, which operates the same as Standard mode, then reverts to Economy mode automatically after 1 hour. During this time, pressing “Cool” or “Warm” followed by “Light” will revert the mode to Economy immediately.

Sleep mode heats the spa to within 20°F (11°C) of the set temperature only during filter cycles. “SLP” will appear on the display until the mode is changed.

Standby mode: Pressing “Cool” or “Warm” followed by “Jets 2” or “Jets 3” will turn off all spa functions temporarily. This is helpful when changing a filter. Pressing any button exits Standby mode.

Directions

- ☒ The Mode button is used to switch between Standard, Economy and Sleep modes.
- ☒ Press “Mode” to enter mode programming.
- ☒ Press “Cool” to cycle through the to the desired mode (LCD flashes until confirmed)
- ☒ When desired mode is located, press “Mode” to confirm selection.

How Do I Change the Mode?

Down East Series (2 – 3 Pump Systems)

2006

Mode Explanation

Standard mode is programmed to maintain the desired temperature. Note that the last measured spa temperature displayed is current only when the pump has been running for at least two minutes. “Std” will be displayed momentarily when you switch into Standard mode.

Economy Mode heats the spa to the set temperature only during filter cycles. “Ecn” will display solid when the temperature is not current and will alternate with the temperature when the temperature is current.

Sleep mode heats the spa to within 20°F (11°C) of the set temperature only during filter cycles. “SLP” will display solid when the temperature is not current, and will alternate with the temperature when the temperature is current.

Directions

Mode is changed by pressing “Warm” or “Cool” button, then pressing the “Light” button.

Down East Series (3 - 4 Pump Systems)

2007 - 2008

Mode Explanation

Standard mode is programmed to maintain the desired temperature. Note that the last measured spa temperature displayed is current only when the pump has been running for at least two minutes. “Std” will be displayed momentarily when you switch into Standard mode.

Economy Mode heats the spa to the set temperature only during filter cycles. “Ecn” will display solid when the temperature is not current and will alternate with the temperature when the temperature is current.

Sleep mode heats the spa to within 20°F (11°C) of the set temperature only during filter cycles. “SLP” will display solid when the temperature is not current, and will alternate with the temperature when the temperature is current.

Directions

Mode is changed by pressing “Warm” or “Cool” button, then pressing the “Mode” button.

How Do I Change the Mode?

Down East Series & Freedom Spa Series (Single Pump Systems)

2003-2005

Mode Explanation

Standard mode is programmed to maintain the desired temperature. Note that the last measured spa temperature displayed is current only when the pump has been running for at least two minutes. “St” will be displayed momentarily when you switch into Standard mode.

Economy Mode heats the spa to the set temperature only during filter cycles. “Ec” will display solid when the temperature is not current and will alternate with the temperature when the temperature is current.

Sleep mode heats the spa to within 20°F (11°C) of the set temperature only during filter cycles. “SL” will display solid when the temperature is not current, and will alternate with the temperature when the temperature is current.

Directions

Mode is changed by pressing “Temp” button, then pressing the “Light” button.

Down East Series & Freedom Spa Series (1 – 2 Pump Systems) 2006-2007

Mode Explanation

Standard mode is programmed to maintain the desired temperature. Note that the last measured spa temperature displayed is current only when the pump has been running for at least two minutes. “St” will be displayed momentarily when you switch into Standard mode.

Economy Mode heats the spa to the set temperature only during filter cycles. “Ec” will display solid when the temperature is not current and will alternate with the temperature when the temperature is current.

Sleep mode heats the spa to within 20°F (11°C) of the set temperature only during filter cycles. “SL” will display solid when the temperature is not current, and will alternate with the temperature when the temperature is current.

Directions

Mode is changed by pressing “Warm” or “Cool” button, then pressing the “Light” button.

How Do I Change the Mode?

Down East Series – Mystic Model

2008

Mode Explanation

Standard mode is programmed to maintain the desired temperature. Note that the last measured spa temperature displayed is current only when the pump has been running for at least two minutes. “St” will be displayed momentarily when you switch into Standard mode.

Economy Mode heats the spa to the set temperature only during filter cycles. “Ec” will display solid when the temperature is not current and will alternate with the temperature when the temperature is current.

Sleep mode heats the spa to within 20°F (11°C) of the set temperature only during filter cycles. “SL” will display solid when the temperature is not current, and will alternate with the temperature when the temperature is current.

Directions

Mode is changed by pressing “Temp” button, then pressing the “Light” button.
