

# How Do I Change the Set Temperature?

---

## 2003 *Legend Series*

### *Down East Series (2 – 3 pump systems)*

- Press the “Warm” or “Cool” button once to display the set temperature
- Each time either button is pressed again, the set temperature will increase or decrease depending on which button is pressed.
- After 3 seconds, the LCD will automatically display the last measured spa temperature.

### *Down East Series (Single Pump Systems)*

### *Freedom Spa Series (Single Pump Systems)*

- Press the “Temp” button to display the set temperature.
- Pressing the “Temp” button a second time, while it is still flashing, will cause the set temperature to increase or decrease, depending on which direction was last chosen.
- Each press to follow will change the set temperature in the same direction.
- If the opposite direction is desired, release the pad and let the display revert to the actual water temperature.
- Press the button to display the set temperature and again to make the temperature change in the desired direction.

---

## 2005 *Legend Series*

### *Down East Series (2 – 3 pump systems)*

- Press the “Warm” or “Cool” button once to display the set temperature
- Each time either button is pressed again, the set temperature will increase or decrease depending on which button is pressed.
- After 3 seconds, the LCD will automatically display the last measured spa temperature.

### *Down East Series (Single Pump Systems)*

### *Freedom Spa Series (Single Pump Systems)*

- Press the “Temp” button to display the set temperature.
- Pressing the “Temp” button a second time, while it is still flashing, will cause the set temperature to increase or decrease, depending on which direction was last chosen.
- Each press to follow will change the set temperature in the same direction.
- If the opposite direction is desired, release the pad and let the display revert to the actual water temperature.
- Press the button to display the set temperature and again to make the temperature change in the desired direction.

---

# How Do I Change the Set Temperature?

---

## 2005 *Legend Series – LSI557 Model*

- ☒ Press “Temp” button once to display the set temperature.
  - ☒ To change the set temperature, press the pad a second time before the LCD stops flashing.
  - ☒ Each press of the “Temp” button will continue to either raise or lower the set temperature.
  - ☒ If the opposite direction is desired, release the pad and let the display revert to the current water temperature.
  - ☒ Press the button to display the set temperature and again to make the temperature change in the desired direction.
  - ☒ After 3 seconds, the LCD will automatically display the last measured set temperature.
- 

## 2006 *Legend Series*

- ☒ Press the “Warm” or “Cool” button once to display the set temperature
- ☒ Each time either button is pressed again, the set temperature will increase or decrease depending on which button is pressed.
- ☒ After 3 seconds, the LCD will automatically display the last measured spa temperature.

### *Legend Series – LSI557 & LSX557 Models Down East Series (2 – 3 Pump System)*

- ☒ To display the set temperature, press the “Warm” or “Cool” pad once.
- ☒ To change the set temperature, press the pad a second time before the LCD stops flashing.
- ☒ Each press of the “Warm” or “Cool” pad will continue to either raise or lower the set temperature.
- ☒ After 3 seconds, the LCD will stop flashing and display the current spa temperature.

### *Down East Series (1 – 2 Pump System)*

### *Freedom Spa Series (1 – 2 Pump Systems)*

- ☒ To display the set temperature, press the “Temp” pad once.
- ☒ To change the set temperature, press the pad a second time before the LCD stops flashing.
- ☒ Each press of the “Temp” pad will continue to either raise or lower the set temperature.
- ☒ If the opposite direction is desired, release the pad and let the display revert to the current water temperature.
- ☒ Press the pad to display the set temperature and again to make the temperature change in the desired direction.
- ☒ After 3 seconds, the LCD will stop flashing and display the current spa temperature.

# How Do I Change the Set Temperature?

---

## 2007 *Legend Series*

- ☒ Press the “Warm” or “Cool” button once to display the set temperature
- ☒ Each time either button is pressed again, the set temperature will increase or decrease depending on which button is pressed.
- ☒ After 3 seconds, the LCD will automatically display the last measured spa temperature.

### *Legend Series – LSI557 & LSX557 Models*

#### *Down East Series (3 - 4 Pump System)*

- ☒ To display the set temperature, press the “Warm” or “Cool” pad once.
- ☒ To change the set temperature, press the pad a second time before the LCD stops flashing.
- ☒ Each press of the “Warm” or “Cool” pad will continue to either raise or lower the set temperature.
- ☒ After 3 seconds, the LCD will stop flashing and display the current spa temperature.

#### *Down East Series (1 – 2 Pump System)*

#### *Freedom Spa Series (1 – 2 Pump Systems)*

- ☒ To display the set temperature, press the “Temp” pad once.
- ☒ To change the set temperature, press the pad a second time before the LCD stops flashing.
- ☒ Each press of the “Temp” pad will continue to either raise or lower the set temperature.
- ☒ If the opposite direction is desired, release the pad and let the display revert to the current water temperature.
- ☒ Press the pad to display the set temperature and again to make the temperature change in the desired direction.
- ☒ After 3 seconds, the LCD will stop flashing and display the current spa temperature.

### *Legacy Series*

- ☒ To display the set temperature, press the “Temp” pad once.
- ☒ To change the set temperature, press the pad a second time before the LCD stops flashing.
- ☒ Each press of the “Temp” pad will continue to either raise or lower the set temperature.
- ☒ If the opposite direction is required for a 1 pump system, release the pad and let the display revert to the current water temperature.
- ☒ Press the pad to display the set temperature and again to make the temperature change in the desired direction.
- ☒ In a 2 pump unit, temperature setting is accomplished by pressing up to increase the temperature or down to decrease the temperature.
- ☒ After 3 seconds, the LCD will stop flashing and display the current spa temperature.

## **How Do I Change the Set Temperature?**

---

### **2008** *Legend Series*

- ☒ Press the “Warm” or “Cool” button once to display the set temperature
- ☒ Each time either button is pressed again, the set temperature will increase or decrease depending on which button is pressed.
- ☒ After 3 seconds, the LCD will automatically display the last measured spa temperature.

### *Legend Series – LSX557 Model*

#### *Down East Series (3 - 4 Pump System)*

- ☒ To display the set temperature, press the “Warm” or “Cool” pad once.
- ☒ To change the set temperature, press the pad a second time before the LCD stops flashing.

- ☒ Each press of the “Warm” or “Cool” pad will continue to either raise or lower the set temperature.
- ☒ After 3 seconds, the LCD will stop flashing and display the current spa temperature.

### *Down East Series – Mystic Model*

- ☒ To display the set temperature, press the “Temp” pad once.
- ☒ To change the set temperature, press the pad a second time before the LCD stops flashing.
- ☒ Each press of the “Temp” pad will continue to either raise or lower the set temperature.
- ☒ If the opposite direction is desired, release the pad and let the display revert to the current water temperature.
- ☒ Press the pad to display the set temperature and again to make the temperature change in the desired direction.
- ☒ After 3 seconds, the LCD will stop flashing and display the current spa temperature.

### *Legacy Series*

- ☒ To display the set temperature, press the “Temp” pad once.
- ☒ To change the set temperature, press the pad a second time before the LCD stops flashing.
- ☒ Each press of the “Temp” pad will continue to either raise or lower the set temperature.
- ☒ If the opposite direction is required for a 1 pump system, release the pad and let the display revert to the current water temperature.
- ☒ Press the pad to display the set temperature and again to make the temperature change in the desired direction.
- ☒ In a 2 pump unit, temperature setting is accomplished by pressing up to increase the temperature or down to decrease the temperature.
- ☒ After 3 seconds, the LCD will stop flashing and display the current spa temperature.